


MEDIA PUBLISHING SYSTEM


1 Unpack

Your Media Publishing System 100 Disc Kiosk Kit includes the following items.

100 Disc Bin

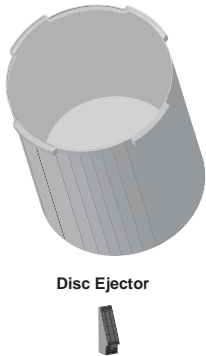


100 Disc Bin Holder

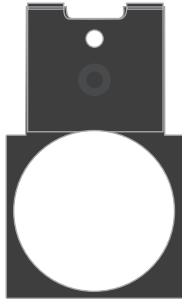

Disc Ejector


2 Install Disc Ejector

Open the lid of the Media Publishing System. (a) Remove the protective covering of the adhesive tape on the back of the Disc Ejector. (b) Using the indented area in the Center Output Area as a guide press the sticky side of the exposed tape of the Disc Ejector firmly against the disc drawer of the lower DVD drive allowing a gap between the Disc Ejector and the indented area as illustrated (c).

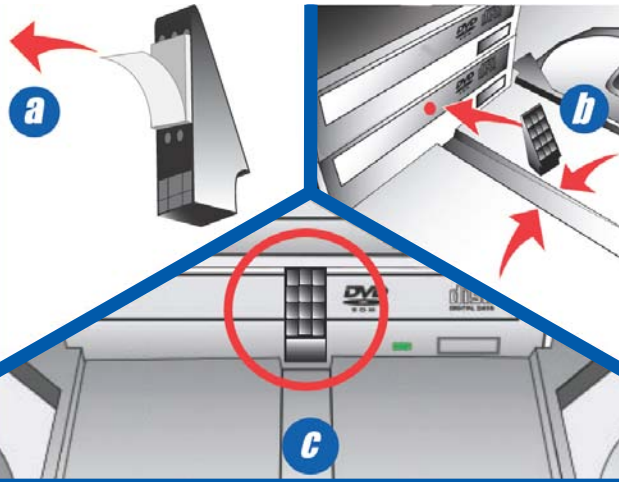

3 Assemble Disc Bin

Place the 100 Disc Bin through the hole in the 100 Disc Bin Holder as shown making sure to push the Disc Bin in until the lip is flush with the surface of the Disc Bin Holder.

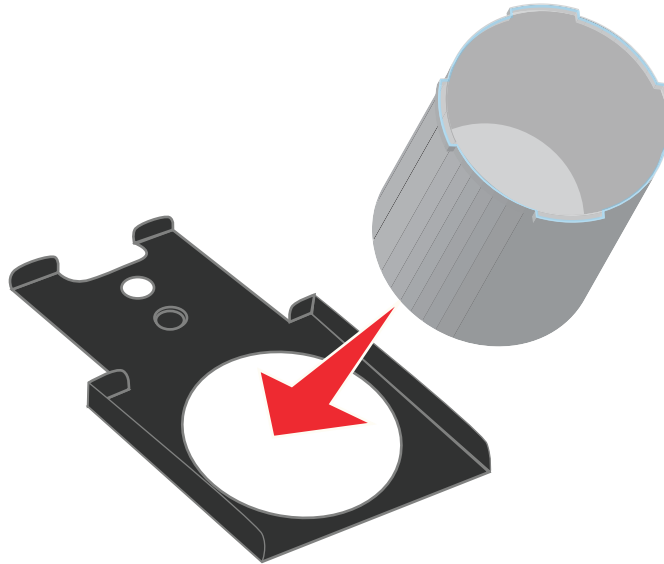


4 Install Disc Bin

Move the Media Publishing System to the edge of a table or desk to make room for the 100 Disc Bin to hang over the edge. Lift the front of the Media Publishing System and place the rear upright tabs of the 100 Disc Bin Holder into the notches under the Media Publishing System. Lower the front of the Media Publishing System while holding onto the Disc Holder. The weight of the Media Publishing System will hold the Disc holder and Bin in place and the tabs (marked by arrows) will be pressed into the front of the Media Publishing System to further stabilize the Disc Bin Holder.



5 Software

Open the DiscDirect Application. From the Tools Menu select Unit Properties to open the window below and select all of the check boxes for Basket 1 and Basket 2. Your Media Publishing System is now set up to Publish 100 discs per session.

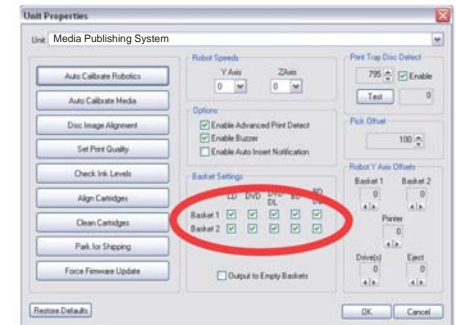

100 DISC KIOSK KIT INSTALL